

Roland Classroom Activity: RM700 Piano

Lesson: Sing Like the Stars

Concepts: Sing for practice rehearsal or entertainment

Preparation:

Note: Select commercial audio CDs with strong solo voices. Center Cancel works best when the vocal track has minimal reverb.

National Standards Met:

Standard 1: Singing, alone and with others, a varied repertoire of music.

Standard 2: Performing on instruments, alone and with others, a varied repertoire of music.

Detailed Lesson Plan:

1. If you want to play a song from USB memory, connect the USB memory to the External Memory connector.
2. If you want to play a song from a CD-ROM, insert the CD into the CD drive..
3. Press the SONG button so its indicator is lit.
4. Press the EXTERNAL MEMORY or CD button, as needed.
5. Touch the name of the song or the track number.
6. Press the CENTER CANCEL button.
7. Press the PLAY button so its indicator is lit.
8. Sing or play with the file.
9. To cancel the CENTER CANCEL button, press the button so its indicator is turned off.